# FUJ¦FILM

# DIGITAL CAMERA FINEPIX C20 Series FINEPIX C10 Series

# **Owner's Manual**

Thank you for your purchase of this product. This manual describes how to use your FUJIFILM digital camera and the supplied software. Be sure that you have read and understood its contents and the warnings in "For Your Safety" (I iii) before using the camera.



	Before You Begin
	First Steps
Basic Photogr	aphy and Playback
Μ	ore on Photography
	More on Playback
	Movies
	Connections
	Menus
	Technical Notes
	Troubleshooting
	Appendix

BL01431-200 EN









# **IMPORTANT SAFETY INSTRUCTIONS**

- <u>Read Instructions</u>: All the safety and operating instructions should be read before the appliance is operated.
- <u>Retain Instructions</u>: The safety and operating instructions should be retained for future reference.
- <u>Heed Warnings</u>: All warnings on the appliance and in the operating instructions should be adhered to.
- Follow Instructions: All operating and use instructions should be followed.

#### Installation

Power Sources: This video product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your appliance dealer or local power company. For video products intended to operate from battery power, or other sources, refer to the operating instructions.

Grounding or Polarization: This video product is equipped with a polarized alternatingcurrent line plug (a plug having one blade wider than the other). This plug will fit into the power outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug. Alternate Warnings: This video product is equipped with a three-wire grounding-type plug, a plug having a third (grounding) pin. This plug will only fit into a grounding-type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

**Overloading**: Do not overload wall outlets and extension cords as this can result in a risk of fire or electric shock.

Ventilation: Slots and openings in the cabinet are provided for ventilation, to ensure reliable operation of the video product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the video product on a bed, sofa, rug, or other similar surface.

This video product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to. This video product should never be placed near or over a radiator or heat register.

Attachments: Do not use attachments not recommended by the video product manufacturer as they may cause hazards.

Water and Moisture: Do not use this video product near water—for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool, and the like.

Power-Cord Protection: Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the appliance.

Accessories: Do not place this video product on an unstable cart, stand, tripod, bracket, or table. The video product may fall, causing serious injury to a child or adult, and serious damage to the appliance. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the video product. Any mounting of the appliance should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.




## For Your Safety

### Antennas

Duttoor Antenna Grounding: If an outside antenna or cable system is connected to the video product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and builtup static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna discharge unit, connection to grounding electrodes, and requirements for the grounding electrode.

#### EXAMPLE OF ANTENNA GROUNDING AS PER NATIONAL ELECTRICAL CODE

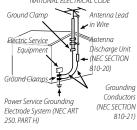

Power Lines: An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

## Use

Cleaning: Unplug this video product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning.

Object and Liquid Entry: Never push objects of any kind into this video product through openings as they may touch dangerous voltage points or short out parts that could result in a fire or electric shock. Never spiill liquid of any kind on the video product.

Lightning: For added protection for this video product receiver during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the video product due to lightning and powerline surges.

## Service

Servicing: Do not attempt to service this video product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

Damage Requiring Service: Unplug this video product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the video product.
- If the video product has been exposed to rain or water.
- If the video product has been dropped or the cabinet has been damaged.

If the video product does not operate nor-

mally follow the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the video product to its normal operation.

When the video product exhibits a distinct change in performance—this indicates a need for service.

Replacement Parts: When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock or other hazards.

Safety Check: Upon completion of any service or repairs to this video product, ask the service technician to perform safety checks to determine that the video product is in proper operating condition.

## Be sure to read these notes before use

## Safety Notes

- Make sure that you use your camera correctly. Read these safety notes and your Owner's Manual carefully before use.
- · After reading these safety notes, store them in a safe place.

## About the lcons

The icons shown below are used in this document to indicate the severity of the injury or damage that can result if the information indicated by the icon is ignored and the product is used incorrectly as a result.



This icon indicates that death or serious injury can result if the information is ignored.



This icon indicates that personal injury or material damage can result if the information is ignored.

The icons shown below are used to indicate the nature of the instructions which are to be observed.



Triangular icons tell you that this information requires attention ("Important").

Circular icons with a diagonal bar tell you that the action indicated is prohibited ("Prohibited").

Filled circles with an exclamation mark indicate an action that must be performed ("Required").





If a problem arises, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera when it is emitting smoke, is emitting any unusual odor, or is in any other abnormal state can cause a fire or electric shock. Contact your FUJIFILM dealer.



Do not allow water or foreign objects to enter the camera. If water or foreign objects get inside the camera, turn the camera off, remove the battery, and disconnect and unplug the AC power adapter. Continued use of the camera can cause a fire or electric shock. Contact your FUJIFILM dealer.

# 🕂 WARNING

#### Do not use the camera in the bathroom or shower. This can cause

Do not use in a fire or electric shock.



Never attempt to change or take apart the camera (never open the case). Failure to observe this precaution can cause fire or electric shock.



Should the case break open as the result of a fail or other axident, do not touch the exposed parts. Failure to observe this precaution could result in electric shock or in injury from touching the damaged parts. Remove the battery immediately, taking care to avoid injury or electric shock, and take the product to the point of purchase for consultation.



Do not change, heat or unduly twist or pull the connection cord and do not place heavy objects on the connection cord. These actions could damage the cord and cause a fire or electric shock. If the cord is damaged, contact your FUJIFILM dealer.



Do not place the camera on an unstable surface. This can cause the camera to fall or tip over and cause injury.

**Never attempt to take pictures while in motion.** Do not use the camera while you are walking or driving a vehicle. This can result in you falling down or being involved in a traffic accident.



 
**Do not touch any metal parts of the camera during a thunderstorm.** This can cause an electric shock due to induced current from the lightning discharge.



**Do not use the battery except as specified.** Load the battery as shown by the indicator.

Do not heat, change or take apart the battery. Do not drop or subject the battery to impacts. Do not store the battery with metallic products. Any of these actions can cause the battery to burst or leak and cause fire or injury as a result.

Use only the battery or AC power adapters specified for use with this camera. Do not use voltages other than the power supply voltage shown. The use of other power sources can cause a fire.



## For Your Safety

A WARNING	
Do not use the charger to charge batteries other than those speci-	
fiedhere. The supplied battery charger is for use only with the type of battery supplied with the camera. Using the charger to charge conventional batteries or other types of rechargeable batteries can cause the battery to leak fluid, overheat or burst.	
When carrying the battery, install it in a digital camera or keep it in the hard case. When storing the battery, keep it in the hard case. When discarding, cover the battery terminals with insulation tape.	

Contact with other metallic objects or batteries could cause the battery to ignite or burst.

Keep memory cards out of the reach of small children. Because memory cards are small, they can be swallowed by children. Be sure to store memory cards out of the reach of small children. If a child swallows a memory card, seek medical attention or call an emergency number.

ſ

## CAUTION

 
Do not use this camera in locations affected by oil fumes, steam, humidity or dust. This can cause a fire or electric shock.

Do not leave this camera in places subject to extremely high temperatures. Do not leave the camera in locations such as a sealed vehicle or in direct sunlight. This can cause a fire.

Keep out of the reach of small children. This product could cause injury in the hands of a child



Do not place heavy objects on the camera. This can cause the heavy object to tip over or fall and cause injury.



ed. Do not pull on the connection cord to disconnect the AC power adapter. This can damage the power cord or cables and cause a fire or electric shock



Do not use the AC power adapter when the plug is damaged or the pluq socket connection is loose. This could cause a fire or electric shock



Do not cover or wrap the camera or the AC power adapter in a cloth or blanket. This can cause heat to build up and distort the casing or cause a fire.



When you are cleaning the camera or you do not plan to use the camera for an extended period, remove the battery and disconnect and unplug the AC power adapter. Failure to do so can cause a fire or electric shock.



When charging ends, unplug the charger from the power socket. Leaving the charger plugged into the power socket can cause a fire

Using a flash too close to a person's eyes may temporarily affect the evesight. Take particular care when photographing infants and vouna children.

### When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card. Iniury could result to those struck by the ejected card.

## Request regular internal testing and cleaning for your camera.



Build-up of dust in your camera can cause a fire or electric shock. Contact your FUJIFILM dealer to request internal cleaning every two years. Please note that this service is not free of charge.

## The Battery and Power Supply

**Note:** Check the type of battery used in your camera and read the appropriate sections.

The following describes the proper use of batteries and how to prolong their life. Incorrect use can shorten battery life or cause leakage, overheating, fire, or explosion.

## Li-ion Batteries

Read this section if your camera uses a rechargeable Li-ion battery.

The battery is not charged at shipment. Charge the battery before use. Keep the battery in its case when not in use.

#### Notes on the Battery

The battery gradually loses its charge when not in use. Charge the battery one or two days before use.

Battery life can be extended by turning the camera off when not in use.

Battery capacity decreases at low temperatures; a depleted battery may not function at when cold. Keep a fully charged spare battery in a warm place and exchange as necessary, or keep the battery in your pocket or other warm place and insert it in the camera only when shooting. Do not place the battery in direct contact with hand warmers or other heating devices.

#### Charging the Battery

Charge the battery in the supplied battery charger. Charging times will increase at ambient temperatures below +10°C (+50°F) or above +35°C (+95°F). Do not attempt to charge the battery at temperatures above 40°C (+104°F); at temperatures below 0°C (+32°F), the battery will not charge.

Do not attempt to recharge a fully charged battery. The battery does not however need to be fully discharged before charging.

The battery may be warm to the touch immediately after charging or use. This is normal.

#### Battery Life

At normal temperatures, the battery can be recharged about 300 times. A noticeable decrease in the length of time the battery will hold a charge indicates that it has reached the end of its service life and should be replaced.

#### Storage

Performance may be impaired if the battery is left unused for extended periods when fully charged. Run the battery flat before storing it.

If the camera will not be used for an extended period, remove the battery and store it in a dry place with an ambient temperature of from  $+15^{\circ}C$  to  $+25^{\circ}C$  ( $+59^{\circ}F$  to  $+77^{\circ}F$ ). Do not store in locations exposed to extremes of temperature.

## Cautions: Handling the Battery

- Do not transport or store with metal objects such as necklaces or hairpins.
- · Do not expose to flame or heat.
- · Do not disassemble or modify.
- Use with designated chargers only.
- Do not drop or subject to strong physical shocks.
- · Do not expose to water.
- · Keep the terminals clean.
- The battery and camera body may become warm to the touch after extended use. This is normal.

### AA Alkaline/Rechargeable Ni-MH Batteries

Read this section if your camera uses AA alkaline or rechargeable AA Ni-MH batteries. Information on compatible battery types may be found elsewhere in the camera manual.

## Cautions: Handling the Batteries

- Do not expose to water, flame, or heat, or store in warm or humid conditions.
- Do not transport or store with metal objects such as necklaces or hairpins.
- Do not disassemble or modify the batteries or battery casing.
- · Do not subject to strong physical shocks.
- Do not use batteries that are leaking, deformed, or discolored.
- Keep out of reach of infants and small children.
- · Insert in the correct orientation.

- Do not mix old and new batteries, batteries with different charge levels, or batteries of different types.
- If the camera will not be used for an extended period, remove the batteries. Note that the camera clock will be reset.
- The batteries may be warm to the touch immediately after use. Turn the camera off and allow the batteries to cool before handling.
- Battery capacity tends to decrease at low temperatures. Keep spare batteries in a pocket or other warm place and exchange as necessary. Cold batteries may recover some of their charge when warmed.
- Fingerprints and other stains on the battery terminals can impair battery performance. Thoroughly clean the terminals with a soft, dry cloth before inserting them in the camera.



If the batteries leak, clean the battery compartment thoroughly before inserting new batteries.



If fluid from the battery comes into contact with skin or clothing, flush the affected area with water. If fluid enters your eyes, immediately flush the affected area with water and seek medical attention. Do not rub your eyes. Failure to observe this precaution could result in permanent visual impairment.

#### Ni-MH Batteries

The capacity of NI-MH batteries may be temporarily reduced when new, after long periods of disuse, or if they are repeatedly recharged before being fully discharged. This is normal and does not indicate a malfunction. Capacity can be increased by repeatedly discharging the batteries using the **DISCHARGE** option in the camera setup menu and recharging them using a battery charger (sold separately).

① CAUTION: Do not use the DISCHARGE option with alkaline batteries.

The camera draws a small amount of current even when off. Ni-MH batteries that have been left in the camera for an extended period may be drawn down to the point that they no longer hold a charge. Battery performance may also drop if the batteries are run down in a device such as a flashlight. Use the DISCHARGE option in the camera setup menu to discharge Ni-MH batteries. Batteries that no longer hold a charge even after repeatedly being discharged and recharged have reached the end of their service life and must be replaced.

Ni-MH batteries can be recharged in a battery charger (sold separately). Batteries may become warm to the touch after charging. Refer to the instructions provided with the charger for more information. Use the charger with compatible batteries only.

Ni-MH batteries gradually lose their charge when not in use.

## Disposal

Dispose of used batteries in accord with local regulations.

## AC Power Adapters (Available Separately)

This section applies to all camera models. Use only FUJIFILM AC power adapters designated for use with this camera. Other adapters could damage the camera.

- The AC power adapter is for indoor use only.
- Be sure the DC plug is securely connected to the camera.
- Turn the camera off before disconnecting the adapter. Disconnect the adapter by the plug, not the cable.
- · Do not use with other devices.
- · Do not disassemble.
- · Do not expose to high heat and humidity.
- · Do not subject to strong physical shocks.
- The adapter may hum or become hot to the touch during use. This is normal.
- If the adapter causes radio interference, reorient or relocate the receiving antenna.

#### Using the Camera

Do not aim the camera at extremely bright light sources, such as the sun in a cloudless sky. Failure to observe this precaution could damage the camera image sensor.

## Take Test Shots

Before taking photographs on important occasions (such as at weddings or before taking the camera on a trip), take a test shot and view the result in the LCD monitor to ensure that the camera is functioning normally. FUJIFILM Corporation can not accept liability for damages or lost profits incurred as a result of product malfunction.

## Notes on Copyright

Unless intended solely for personal use, images recorded using your digital camera system cannot be used in ways that infringe copyright laws without the consent of the owner. Note that some restrictions apply to the photographing of stage performances, entertainments, and exhibits, even when intended purely for personal use. Users are also asked to note that the transfer of memory cards containing images or data protected under copyright laws is only permissible within the restrictions imposed by those copyright laws.

#### Handling

To ensure that images are recorded correctly, do not subject the camera to impact or physical shocks while images are being recorded.

## Liquid Crystal

In the event that the LCD monitor is damaged, care should be taken to avoid contact with liquid crystal. Take the urgent action indicated should any of the following situations arise:

- If liquid crystal comes in contact with your skin, clean the area with a cloth and then wash thoroughly with soap and running water.
- If liquid crystal enters your eyes, flush the affected eye with clean water for at least 15 minutes and then seek medical assistance.
- If liquid crystal is swallowed, rinse your mouth thoroughly with water. Drink large quantities of water and induce vomiting, then seek medical assistance.

Although the display is manufactured using extremely high-precision technology, it may contain pixels that are always lit or that do not light. This is not a malfunction, and images recorded with the product are unaffected.

## Trademark Information

xD-Picture Card and \_\_\_\_\_ are trademarks of FUJIFILM Corporation. The typefaces included herein are solely developed by DynaComware Taiwan Inc. Macintosh, OuickTime, and Mac OS are trademarks of Apple Inc. in the U.S.A. and other countries. Windows 7, Windows Vista, and the Windows logo are trademarks of the Microsoft group of companies. Adobe and Adobe Reader are either trademarks or registered trademarks of Adobe Systems Incorporated in the U.S.A. and/or other countries. The SDHC and SDXC logos are trademarks of SD-3C, LLC. The HDMI logo is a trademark. YouTube is a trademark of Google Inc. All other trade names mentioned in this manual are the trademarks or registered trademarks of their respective owners.

#### Electrical Interference

This camera may interfere with hospital or aviation equipment. Consult with hospital or airline staff before using the camera in a hospital or on an aircraft.

## **Color Television Systems**

NTSC (National Television System Committee) is a color television telecasting specification adopted mainly in the U.S.A., Canada, and Japan. PAL (Phases Alternation by Line) is a color television system adopted mainly in European countries and China.

## Exif Print (Exif Version 2.3)

Exif Print is a newly revised digital camera file format in which information stored with photographs is used for optimal color reproduction during printing.

## IMPORTANT NOTICE: Read Before Using the Software

Direct or indirect export, in whole or in part, of licensed software without the permission of the applicable governing bodies is prohibited.

# **About This Manual**


Before using the camera, read this manual and the warnings in "For Your Safety" (I) ii). For information on specific topics, consult the sources below.

# Table of Contents Image: Signature of Contents I

# Memory Cards

Pictures can be stored on optional SD and SDHC memory cards (🕮 9). In this manual, SD/SDHC memory cards are referred to as "memory cards."

# Frequently-Used Buttons

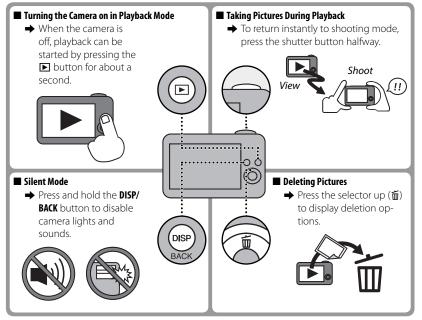

For Your Safety	ii
IMPORTANT SAFETY INSTRUCTIONS	
Safety Notes	iv
About This Manual	
Frequently-Used Buttons	X

## **Before You Begin**

Symbols and Conventions	1
Supplied Accessories	1
Parts of the Camera	
Camera Displays	4
Shooting	
Playback	
i iu) such	

# **First Steps**

Inserting the Batteries and a Memory Card	6
Compatible Memory Cards	
Turning the Camera on and Off	
Shooting Mode	
Playback Mode	
Basic Setup	13

# **Basic Photography and Playback**

Taking Pictures in 品品 (Scene Recognition) Mode	14
Viewing Pictures	17

More on Photography	
Shooting Mode	18
Choosing a Shooting Mode	18
Shooting Mode Options	19
PANORAMA	21
Focus Lock	24
Exposure Compensation	26
Macro Mode (Close-ups)	27
<b>4</b> Using the Flash (Intelligent Flash)	28
🖒 Using the Self-Timer	
P Intelligent Face Detection	

## **More on Playback**

Playback Options	
Playback Zoom	
Multi-Frame Playback	34
Deleting Pictures	35
🐼 Image Search	
PhotoBook Assist	37
Creating a PhotoBook	37
Viewing Photobooks	
Editing and Deleting Photobooks	
Viewing Panoramas	

# Movies

Recording Movies	40
Viewing Movies	42

## Connections

Viewing Pictures on TV	43
Printing Pictures via USB	
Printing the DPOF Print Order	46
Viewing Pictures on a Computer	48
Windows: Installing MyFinePix Studio	48
Macintosh: Installing FinePixViewer	50
Connecting the Camera	52

Menus	
Using the Menus: Shooting Mode	55
Using the Shooting Menu	55
Shooting Menu Options	55
SHOOTING MODE	55
ISO ISO	55
▲ IMAGE SIZE	56
🟦 IMAGE QUALITY	57
WB WHITE BALANCE	58
🕰 FACE DETECTION	59
MODE	59
QUALITY	59

Using the Menus: Playback Mode	
Using the Playback Menu	60
Playback Menu Options	60
PHOTOBOOK ASSIST	60
🐼 IMAGE SEARCH	60
💼 ERASE	60
🚳 MARK FOR UPLOAD TO	61
🗗 SLIDE SHOW	62
•• PROTECT	63
CROP	63
RESIZE	64
IMAGE ROTATE	64
PRINT ORDER (DPOF)	

The Setup Menu	65
Using the Setup Menu	65
Setup Menu Options	66
O DATE/TIME	66
🔊 TIME DIFFERENCE	66
थे 言語/LANG	66
SILENT MODE	66
🔹 RESET	67
🕞 FORMAT	67
🖃 IMAGE DISP	67
🖭 FRAME NO	
↔ OPERATION SOUND	68
SHUTTER SOUND	69
🔅 LCD BRIGHTNESS	69
😡 LCD MODE	
AUTO POWER OFF	
🐲 DIGITAL IS	
BLINK DETECTION	
Q DIGITAL ZOOM	
📩 MOVIE ZOOM TYPE	
BACKGROUND COLOR	
GUIDANCE DISPLAY	
NUSE VIDEO SYSTEM	
BATTERY TYPE	
DISCHARGE (Ni-MH Batteries Only)	73

# **Technical Notes**

Optional Accessories	74
Printing	74
Computer Related	74
Audio/Visual	
Accessories from FUJIFILM	75
Caring for the Camera	76
Storage and Use	76
Water and Sand	76
Condensation	76
Cleaning	
Traveling	
5	

Troubleshooting	
Problems and Solutions	78
Warning Messages and Displays	83
Appendix	
Tips and Tricks	87
Memory Card Capacity	90
FinePix C20 Series	90
FinePix C10 Series	91
Specifications	92

# **Before You Begin**

# Symbols and Conventions

The following symbols are used in this manual:

- $\ensuremath{\mathbbm O}$  : This information should be read before use to ensure correct operation.
- : Additional information that may be helpful when using the camera.
- 🖽 : Other pages in this manual on which related information may be found.

Menus and other text in the LCD monitor are shown in **bold**. In the illustrations in this manual, displays may be simplified for explanatory purposes.

 
# Supplied Accessories

The following items are included with the camera:




# Attaching the Strap

Attach the strap as shown.



# Parts of the Camera

For more information, refer to the page listed to the right of each item.

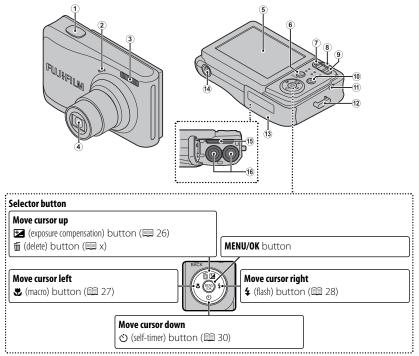


# Parts of the Camera

1 Shutter button	<b>9 T</b> (zoom in) button15, 33
2 Microphone	
3 Flash	11 USB multi-connector
4 Lens and lens cover	12 Strap eyelet 1
5 LCD monitor	
6 DISP (display)/BACK button5, 13	14 Tripod mount
🔩 (silent mode) button <sup>*</sup> x	15 Memory card slot7
7 W (zoom out) button15, 33	16 Battery chamber
8 ON/OFF button 11	

\*Press and hold the **DISP/BACK** button until 🔮 is displayed.

# <u>Camera Displays</u>

The following types of indicator may be displayed during shooting and playback. Indicators vary with camera settings.

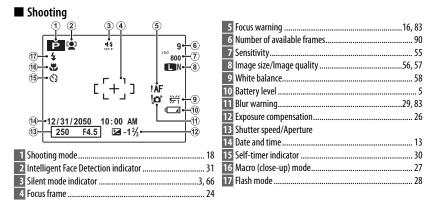

#### Playback 4 1 Playback mode indicator.....17, 32 [ě] 並曲 100-0001-1SO 400 4.3N 5 Frame number ...... 68 $(\overline{\mathbf{n}})$ 6 Mark for upload to ..... 61 • 🎲 YouTube ŧ d a 8 DPOF print indicator ...... 46 12/31/2050 10.00 AM 1/250F4.5 **1**/2

# Battery Level

Battery level is shown as follows:

Indicator	Description
NO ICON	Batteries are partially discharged.
<b>4</b> (red)	Batteries are low. Replace as soon as possible.
<b>↓</b> (blinks red)	Batteries are exhausted. Turn camera off and replace batteries.

## Hiding and Viewing Indicators

Press **DISP/BACK** to cycle through shooting and playback indicators as follows:

- · Shooting: Indicators displayed/indicators hidden/best framing
- Playback: Indicators displayed/indicators hidden

 
# First Steps

# Inserting the Batteries and a Memory Card

Insert the batteries and memory card as described below.

# 1 Open the battery-chamber cover.

- Be sure the camera is off before opening the battery-chamber cover.
- ① Do not open the battery-chamber cover when the camera is on. Failure to observe this precaution could result in damage to image files or memory cards.




 ${\scriptstyle \textcircled{O}}$  Do not use excessive force when handling the battery-chamber cover.

# 2 Insert the batteries.

 Insert the batteries in the orientation shown by the "+" and "-" marks.

- ① Insert the batteries in the correct orientation.
- ① Never use batteries with peeling or damaged casing or mix old and new batteries, batteries with different charge levels, or batteries of <u>different types.</u> Failure to observe these precautions could result in the batteries leaking or overheating.
- ① Never use manganese or Ni-Cd batteries.







# 3 Insert the memory card.


Holding the memory card in the orientation shown at right, slide it in until it clicks into place at the back of the slot.

① Be sure card is in the correct orientation: do not insert at an angle or use force.

   - ① SD/SDHC memory cards can be locked, making it impossible to format the card or to record or delete images. Before inserting an SD/SDHC memory card, slide the write-protect switch to the unlocked position.
- 4 Close the battery-chamber cover.








Click

Write-protect switch

## Removing the Memory Card

 Before removing the memory card, *turn the camera off* and open the battery-chamber cover.

To remove the memory card, press it in and release it slowly. The card can then be removed by hand. When a memory card is removed, the card could come out of the slot too quickly. Use your finger to hold it and gently release the card.



# Compatible Memory Cards

FUJIFILM and SanDisk SD and SDHC memory cards have been approved for use in the camera. Operation is not guaranteed with other cards. The camera can not be used with *xD-Picture Cards* or MultiMediaCard (MMC) devices.

## ① Memory Cards

 
- Do not turn the camera off or remove the memory card while the memory card is being formatted or data are being recorded to or deleted from the card. Failure to observe this precaution could damage the card.
- Format SD/SDHC memory cards before first use, and be sure to reformat all memory cards after using them in a computer or other device. For more information on formatting memory cards, see " FORMAT" (E 67).
- Memory cards are small and can be swallowed; keep out of reach of children. If a child swallows a memory card, seek medical assistance immediately.
- miniSD or microSD adapters that are larger or smaller than the standard dimensions of an SD/SDHC memory card may not eject normally; if the card does not eject, take the camera to an authorized service representative. Do not forcibly remove the card.
- Do not affix labels to memory cards. Peeling labels can cause camera malfunction.

• Formatting a memory card in the camera creates a folder in which pictures are stored. Do not rename or delete this folder or use a computer or other device to edit, delete, or rename image files. Always use the camera to delete pictures; before editing or renaming files, copy them to a computer and edit or rename the copies, not the originals.

# Turning the Camera on and Off

# Shooting Mode

Press the **ON/OFF** button to turn the camera on. The lens will extend and the lens cover will open.




Press **ON/OFF** again to turn the camera off.

# Switching to Playback Mode

 Press the D button to start playback. Press the shutter button halfway to return to shooting mode.

# Playback Mode

To turn the camera on and begin playback, press the **D** button for about a second.



Press the **D** button again or press the **ON/OFF** button to turn the camera off.

# Switching to Shooting Mode

To exit to shooting mode, press the shutter button halfway. Press the **D** button to return to playback.

- ${\scriptstyle \textcircled{O}}$  Forcibly obstructing the lens could cause damage or product malfunction.
- ${\scriptstyle \textcircled{O}}$  Fingerprints and other marks on the lens can affect pictures. Keep the lens clean.
- ${\rm \oplus}\,$  The  ${\rm ON/OFF}\,$  button does not completely end the supply of power to the camera.

# Auto Power Off

The camera will turn off automatically if no operations are performed for the length of time selected for **T AUTO POWER OFF** (E 69).

# **Basic Setup**

A language-selection dialog is displayed the first time the camera is turned on. Set up the camera as described below (you can reset the clock or change languages at any time using the **③ DATE/TIME** or **③** 言語/LANG. options in the setup menu; for information on displaying the setup menu, see page 65).

- 1 Highlight a language and press MENU/OK.
  - Press DISP/BACK to skip the current step. Any steps you skip will be displayed the next time the camera is turned on.
- 2 The date and time will be displayed. Press the selector left or right to highlight the year, month, day, hour, or minute and press up or down to change. To change the order in which the year, month, and day are displayed, highlight the date format and press the selector up or down. Press **MENU/OK** when settings are complete.
- If Ni-MH batteries inserted in the camera, use BATTERY TYPE in the setup menu to specify the battery type.
- If the batteries are removed for an extended period, the camera clock will be reset and the language-selection dialog will be displayed when the camera is turned on.



爾會語/IANG

RANCAIS

TIME NOT SET			
2013 2012 2011 2010 2010 2009	1.	1	12:00 AM
EACK NO			
	2013 2012 DD 2011 2010 2009	2013 2012 DD 2011 1. 2010 2009	2013 2012 DD 2011 1. 1 2010 2009

 
# **Basic Photography and Playback**

# Taking Pictures in 🙈 (Scene Recognition) Mode

This section describes how to take pictures in 👪 (scene recognition) mode. The camera automatically analyzes the composition and adjusts settings appropriately.

# **1** Turn the camera on.

Press the **ON/OFF** button to turn the camera on. Shooting indicators will be displayed.



# 🖢 The 😫 Icon

This icon indicates that the camera continuously searches for faces to select the appropriate scene, increasing the drain on the batteries.




# The Scene Icon

The camera selects the scene according to shooting conditions and the type of subject: **O** PORTRAIT (portraits), **O** LANDSCAPE (landscapes), **O** NIGHT (porly-lit landscapes), **O** NIGHT PORTRAIT (poorly-lit portraits), **O** AUTO (all other scenes)

# 2 Frame the picture.

Use the zoom buttons to frame the picture in the display.

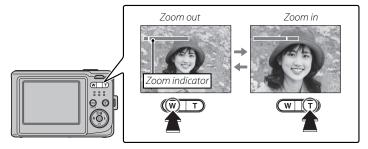

# Holding the Camera

Hold the camera steady with both hands and brace your elbows against your sides. Shaking or unsteady hands can blur your shots.

To prevent pictures that are out of focus or too dark (underexposed), keep your fingers and other objects away from the lens and flash.





**Basic Photography and Playback** 

## Taking Pictures in 📠 (Scene Recognition) Mode

# 3 Focus.

Press the shutter button halfway to focus.

The lens may make a noise when the camera focuses; this is normal.

If the camera is able to focus, it will beep twice.

If the camera is unable to focus, the focus frame will turn red, **!AF** will be displayed. Change the composition or use focus lock (圓 24).

# 4 Shoot.

Smoothly press the shutter button the rest of the way down to take the picture.

If the subject is poorly lit, the flash may fire when the picture is taken. For information on using the flash when lighting is poor, see "4 Using the Flash (Intelligent Flash)" (
 (
 28).

# The Shutter Button

The shutter button has two positions. Pressing the shutter button halfway sets focus and exposure; to shoot, press the shutter button the rest of the way down.





# **Viewing Pictures**

Pictures can be viewed in the LCD monitor. When taking important photographs, take a test shot and check the results.


# 1 Press the 🕨 button.

The most recent picture will be displayed.

# 2 View additional pictures.

Press the selector right to view pictures in the order recorded, left to view pictures in reverse order.

 Press the shutter button to exit to shooting mode.



# More on Photography

# Shooting Mode

Choose a shooting mode according to the scene or type of subject.

 
# Choosing a Shooting Mode

**1** Press **MENU/OK** to display the shooting menu.

2 Highlight **SHOOTING MODE** and press the selector right to display shooting mode options.

3 Highlight the desired mode and press MENU/OK.

4 Press DISP/BACK to exit to shooting mode.





BACK EXIT

# **Shooting Mode Options**

Scene	Description
品品 SCENE RECOGNITION	The camera automatically analyzes the composition and selects a scene according to shooting conditions and the type of subject.
AUTO	Choose for crisp, clear snapshots. This mode is recommended in most situations.
P PROGRAM AE	Options for white balance will be fully available and exposure compensa- tion can be adjusted manually.
🗯 MOVIE	Shoot a movie with sound.
ጭ\$NATURAL & \$	The camera takes two shots: one without the flash and one with.
NATURAL LIGHT	Capture natural lighting under low-light conditions.
PORTRAIT	Choose for portraits.
SMILE&SHOOT	The shutter is released automatically when Intelligent Face Detection detects a smiling face.
LANDSCAPE	Choose for daylight shots of buildings and landscapes.
🕅 PANORAMA	Take up to three pictures and join them together to form a panorama.
🛠 SPORT	Choose when photographing moving subjects.
C NIGHT	Choose this mode for poorly lit twilight or night scenes.
<sup>®</sup> C <sup>*</sup> NIGHT (TRIPOD)	Choose this mode for slow shutter speeds when shooting at night.
🚢 SUNSET	Choose this mode to record the vivid colors in sunrises and sunsets.

 
## Shooting Mode

Scene	Description
	Choose for crisp, clear shots that capture the brightness of scenes domi- nated by shining white snow.
🔊 BEACH	Choose for crisp, clear shots that capture the brightness of sunlit beaches.
✤ FLOWER	Choose for vivid close-ups of flowers.

# PANORAMA

In this mode, you can take up to three pictures and join them together to form a panorama. Use of a tripod is recommended to assist in composing overlapping shots. The camera zooms all the way out and zoom remains fixed at the widest angle until shooting is complete.

- 1 Select 🚾 AUTO for 🖾 MODE in the shooting menu (🕮 55).
- **2** Press the selector up to select a frame. Press the selector left or right to highlight a pan direction and press MENU/OK.
- 3 Take a photograph. Exposure and white balance for the panorama are set with the first shot.
- **4** Frame the next shot to overlap with the previous picture by superimposing ⊕ on + so that they form a solid circle (●). The camera will release the shutter automatically.



Shutter released

- 5 Take the last shot as described in Step 4.
  - To end shooting and create a panorama after the first or second shot, press the multi selector up after completing Step 3 or Step 4 and proceed to Step 6.

# 6 Press MENU/OK to save the picture.

- ① The desired results may not be achieved with moving subjects, subjects close to the camera, unvarying subjects such as the sky or a field of grass, subjects that are in constant motion, such as waves and waterfalls, or subjects that undergo marked changes in brightness. Panoramas may be blurred if the subject is poorly lit.

## For Best Results

For best results, be careful not to tilt the camera backward or forward or to either side and try not to move the camera while  $\oplus$  and + are aligned to form a solid circle.

 
## Printing Panoramas

Depending on the page size and the size of the panorama, panoramas may print with their edges cropped out or with wide margins at the top and bottom or at both sides.

#### Framing Panoramas Manually

Follow the steps below if the desired results are not achieved with **MAUTO** selected for **MODE**:

- **1** Select **MANUAL** for **MODE** in the shooting menu.
- **2** Select a frame and take the first shot.
- **3** Press **MENU/OK** to display a guide showing an edge of the picture you have just taken. Take the next shot, framing it to overlap with the previous picture.



- **4** Repeat Step 3 to take the third shot and then press **MENU/OK** to display the completed panorama.
- 5 Press MENU/OK to save the picture.


## Focus Lock

To compose photographs with off-center subjects:

- **1** Focus: Position the subject in the focus frame (t'\_+') and press the shutter button halfway to lock focus and exposure. Focus and exposure will remain locked while the shutter button is pressed halfway (AF/AE lock).
- **2 Recompose**: Keep the button pressed halfway.

**3 Shoot**: Press the button all the way down.



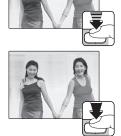


### Autofocus


Although the camera boasts a high-precision autofocus system, it may be unable to focus on the subjects listed below. If the camera is unable to focus, focus on another subject at the same distance and use focus lock to recompose the photograph.

Very shiny subjects such as mirrors or car bodies.
 Fast-moving subjects.
 Subjects photographed through a window or other reflective object.
 Dark subjects and subjects that absorb rather than reflect light, such as hair or fur.
 Insubstantial subjects, such as smoke or flame.
 Subjects that show little contrast with the background (for example, subjects in clothing that is the same color as the background).
 Subjects positioned in front of or behind a high-contrast object that is also in the focus frame (for example, a subject photographed against a backdrop of highly contrasting elements).

# Exposure Compensation

 To adjust exposure compensation when photographing very bright, very dark, or high-contrast subjects, press the selector up (2). Press the selector up or down to choose an exposure compensation value and then press **MENU/OK**.



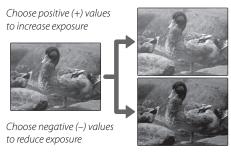

- A ☑ icon and exposure indicator are displayed at settings other than ±0. Exposure compensation is not reset when the camera is turned off; to restore normal exposure control, choose a value of ±0.
- Turn the flash off when using exposure compensation.
- Exposure compensation is available only when P (PROGRAM AE) is selected for shooting mode.

# Macro Mode (Close-ups)

For close-ups, press the selector left (♥) and select ♥. When macro mode is in effect, the camera focuses on subjects near the center of the frame. Use the zoom buttons to compose pictures (■ 15).

To exit macro mode, press the selector left (S) and select  $\oiint{F}$ .

Use of a tripod is recommended to prevent blur caused by camera shake.

The flash may fail to light the entire subject at very short ranges. Increase the distance to the subject or adjust the range by zoom buttons and try again.

 


# 4 Using the Flash (Intelligent Flash)

When the flash is used, the camera's *Intelligent Flash* system instantly analyzes the scene based on such factors as the brightness of the subject, its position in the frame, and its distance from the camera. Flash output and sensitivity are adjusted to ensure that the main subject is correctly exposed while preserving the effects of ambient background lighting, even in dimly-lit indoor scenes. Use the flash when lighting is poor, for example when shooting at night or indoors under low light.

Press the selector right (**4**) and choose from the following flash modes:






Option	Description	
AUTO/ (AUTO FLASH) The flash fires when required. Recommended in most situations.		
	The flash fires whenever a picture is taken. Use for backlit subjects or for natural coloration when shooting in bright light.	
(SUPPRESSED FLASH)	The flash does not fire even when the subject is poorly lit. Use of a tripod is recommended.	
	Capture both the main subject and the background under low light (note that brightly lit scenes may be overexposed).	

- If the flash will fire, i will be displayed when the shutter button is pressed halfway. At slow shutter speeds, i will appear in the display to warn that pictures may be blurred; use of a tripod is recommended.
- Flash is charging if 🛃 blinks in yellow. Wait for completing the charge.
- The flash may fire several times with each shot. Do not move the camera until shooting is complete.
- The flash may cause vignetting.

# 👏 Using the Self-Timer

 To use the self-timer, press the selector down ( $\mathfrak{O}$ ) and choose from the following options:






Option Description		
♀ (OFF) Self-timer off.		
് <b>റ</b> (10 SEC)	The shutter is released ten seconds after the shutter button is pressed. Use for self-portraits.	
	The shutter is released two seconds after the shutter button is pressed. Use to reduce blur caused by the camera moving when the shutter-release button is pressed.	

# 🖾 Intelligent Face Detection

 Intelligent Face Detection sets focus and exposure for human faces anywhere in the frame, preventing the camera from focusing on the background in group portraits. Choose for shots that emphasize portrait subjects.

To use Intelligent Face Detection, press **MENU/OK** to display the shooting menu and select **ON** for **PACE DETECTION**. Faces can be detected with the camera in vertical or horizontal orientation; if a face is detected, it will be indicated by a green bor-

der. If there is more than one face in the frame, the camera will select the face closest to the center; other faces are indicated by white borders.





- ${\rm \oplus}\,$  In some modes, the camera may set exposure for the frame as a whole rather than the portrait subject.
- ${\rm I}$  If the subject moves as the shutter button is pressed, their face may not be in the area indicated by the green border when the picture is taken.

# More on Playback

## Playback Options

To view the most recent picture in the LCD monitor, press the  $\blacktriangleright$  button.



Press the selector right to view pictures in the order recorded, left to view pictures in reverse order. Keep the selector pressed to scroll rapidly to the desired frame.

Pictures taken using other cameras are indicated by a # ("gift image") icon during playback.

### <u>Playback Zoom</u>

Press **T** to zoom in on pictures displayed in single-frame playback; press **W** to zoom out. When the picture is zoomed in, the selector can be used to view areas of the image not currently visible in the display.



Zoom indicator

Navigation window shows portion of image currently displayed in LCD monitor

Press **DISP/BACK** to exit zoom.

The maximum zoom ratio varies with image size. Playback zoom is not available with cropped or resized copies saved at a size of 200 or smaller.

## Multi-Frame Playback

Pressing **W** when a picture is shown full-frame in the LCD monitor displays the current image with previous and following images in the background. Press **W** to increase the number of images displayed, **T** to view fewer images.





When two or more images are displayed, use the selector to highlight images and press **MENU/OK** to view the highlighted image full frame.

# Deleting Pictures

To delete individual pictures, multiple selected pictures, or all pictures, press **MENU/OK**, select **IIII ERASE** (IIII 60), and choose from the options below. *Note that deleted pictures can not be re*-





covered. Copy important pictures to a computer or other storage device before proceeding.

Option	Description	
FRAME	Press the selector left or right to scroll through pictures and press <b>MENU/OK</b> to delete the current picture (a confirmation dialog is not displayed).	
SELECTED FRAMES       Highlight pictures and press MENU/OK to select or deselect (pictur are protected or in a print order are shown by I). When the operation of the press DISP/BACK to display a confirmation dialog, then his OK and press MENU/OK to delete the selected pictures.         ALL FRAMES       A confirmation dialog will be displayed; highlight OK and press MENU delete all unprotected pictures. Pressing DISP/BACK cancels deletio that any pictures deleted before the button was pressed can not covered.		

- Protected pictures can not be deleted. Remove protection from any pictures you wish to delete (E 63).
- If a message appears stating that the selected images are part of a DPOF print order, press MENU/OK to delete the pictures.

## 🛃 Image Search

Search for pictures.

- 1 Select 
  <sup>IMAGE SEARCH</sup> in the playback menu (■ 60), highlight one of the following search criteria, and press MENU/OK:
  - BY DATE: Search by date.
  - **BY FACE**: Search for faces from the face recognition database.
  - BY SCENE: Search by scene.
  - BY TYPE OF DATA: Find all still pictures or all movies.
  - **BY UPLOAD MARK**: Find all pictures selected for upload to a specified destination.
- 2 Select a search condition. Only pictures that match the search condition will be displayed. To delete or protect selected pictures or to view the search results in a slide show, press MENU/OK and choose I ERASE (I 35),
   □ PROTECT (I 63), or I SLIDE SHOW (I 62).

## 🗳 PhotoBook Assist

Create books from your favorite photos.

## Creating a PhotoBook

- 1 Select **NEW BOOK** for **□ PHOTOBOOK ASSIST** in the playback menu (□ 60) and choose from the following options:
  - SELECT FROM ALL: Choose from all available pictures.
  - SELECT BY IMAGE SEARCH: Choose from pictures matching selected search conditions (Ⅲ 36).
  - Neither photographs 60 or smaller nor movies can be selected for photobooks.
- 2 Scroll through the images and press the selector up to select or deselect. To display the current image on the cover, press the selector down. Press MENU/OK to exit when the book is complete.
  - The first picture selected becomes the cover image. Press the selector down to select a different image for the cover.
- **3** Select **COMPLETE PHOTOBOOK** (to select all photos or all photos matching the specified search conditions for the book, choose **SELECT ALL**). The new book will be added to the list in the photobook assist menu.
- ${\scriptstyle \textcircled{O}}$  Books can contain up to 300 pictures.
- ${\ensuremath{\textcircled{}}}$  Books that contain no photos are automatically deleted.

### Viewing Photobooks

Highlight a book in the photobook assist menu and press **MENU/OK** to display the book, then press the selector left or right to scroll through the pictures.

### Editing and Deleting Photobooks

Display the photobook and press **MENU/OK**. The following options will be displayed; select the desired option and follow the on-screen instructions.

- EDIT: Edit the book as described in "Creating a PhotoBook" (🕮 37).
- ERASE: Delete the book.

### Photobooks

Photobooks can be copied to a computer using the supplied MyFinePix Studio software.

## Viewing Panoramas

If you press the selector down when a panorama is displayed full frame, the camera will play back the picture from left to right. To pause playback, press the selector down again to resume. To delete the panorama, press the selector up ( $\mathbf{t}$ ) when playback is paused. To exit to full-frame playback, press the selector up while panorama playback is in progress.



# Movies

## **Recording Movies**

Shoot short movies with sound. During recording, ● **REC** and the time remaining will be displayed in the LCD monitor and sound will be recorded via the built-in microphone (be careful not to cover the microphone during recording).

REC

12s

- **2** Press the shutter button all the way down to start recording.
- **3** To end recording, press the shutter button again. Recording ends automatically when the movie reaches maximum length or memory is full.

### Zoom adjustment

Zoom can be adjusted while recording is in progress. Select the type of zoom available for 📸 **MOVIE ZOOM TYPE** in the setup menu. Selecting **OPTICAL** blocks sound being recorded when zooming.

- Select ecording, select a frame size using the G QUALITY option in the shooting menu. Select G (640×480) to record standard definition movies, or G (320×240) for longer movies.
- Focus, exposure, and white balance are adjusted automatically throughout recording. The color and brightness of the image may vary from that displayed before recording begins.
- Sounds made by the camera may be recorded.
- ① Do not open the battery-chamber cover during shooting or saving a movie on a memory card. Failure to observe this precaution could prevent the movie from being played back.
- ${\rm \oplus}\,$  Vertical or horizontal streaks may appear in movies containing very bright subjects. This is normal and does not indicate a malfunction.
- ① The temperature of the camera may rise if it is used to record movies for an extended period or if the ambient temperature is high. This is normal and does not indicate a malfunction.

# Viewing Movies

Ontion

During playback, movies are displayed in the LCD monitor as shown at right. The following operations can be performed while a movie is displayed:

Description

option	Description	
Start/pause	Press the selector down to start playback. Press again to	
playback	pause.	
End playback/	Press the selector up to end playback. If playback is not in	
delete	progress, pressing the selector up will delete the movie.	
Advance/	Press the selector right to advance, left to rewind. If playback	
rewind	is paused, the movie will advance or rewind one frame each time the selector is pressed.	

 ${\scriptstyle \textcircled{O}}$  Sound will not be played when you play a movie with this camera.

 


# Connections

## Viewing Pictures on TV

Connect the camera to a TV to show pictures to a group.

**1** Turn the camera off and connect an optional A/V cable as shown below.



 ${\scriptstyle \oplus}$  When connecting cables, be sure the connectors are fully inserted.

Image quality may drop during movie playback.


- **2** Tune the television to the video input channel. See the documentation supplied with the television for details.
- 3 Press the ▶ button for about a second to turn the camera on. The camera monitor turns off and pictures and movies are played back on the TV.

#### Connections
 
## Printing Pictures via USB

If the printer supports PictBridge, the camera can be connected directly to the printer as shown below and pictures can be printed without first being copied to a computer. Note that depending on **PictBridge** the printer, not all the functions described below may be supported.

1 Connect the supplied USB cable as shown and turn the printer on.



- **2** Press the **D** button for about a second to turn the camera on.
- **3** Press the selector left or right to display a picture you wish to print.
- **4** Press the selector up or down to choose the number of copies (up to 99).
- **5** Repeat steps 3–4 to select additional pictures. Press **MENU/OK** to display a confirmation dialog when settings are complete.

- **6** Press **MENU/OK** to start printing. Printing can be interrupted by pressing **DISP/BACK**, but note that some printers may not respond immediately. If the printer stops before printing is complete, turn the camera off and then on again.
- **7** After confirming that **PRINTING** has cleared from the camera display, turn the camera off and disconnect the USB cable.
- Pictures can be printed from a memory card that has been formatted in the camera.
- If no pictures are selected, the camera will print one copy of the current picture.
- Page size, print quality, and border selections are made using the printer.

#### Printing the Date of Recording

To print the date of recording on pictures, press **DISP/BACK** in the PictBridge display and select **PRINT WITH DATE** in the PictBridge menu (to print pictures without the date of recording, select **PRINT WITHOUT DATE**).

DPOF

Printing Pictures via USB

### Printing the DPOF Print Order

The PRINT ORDER (DPOF) option in the playback menu can be used to create a digital "print order" for PictBridge-compatible printers (🗐 74) or devices that support DPOF.

## DPOF

DPOF (Digital Print Order Format) is a standard that allows pictures to be printed from "print orders" stored on a memory card. The information in the order includes the pictures to be printed and the number of copies of each picture.

- **1** Select playback mode and press **MENU/OK** to display the playback menu.
- 2 Highlight PRINT ORDER (DPOF) and press MENU/OK.
- 3 Highlight one of the following options and press MENU/OK:
  - WITH DATE C: Print the date of recording on pictures.
  - WITHOUT DATE: Do not print the date of recording on pictures.
  - Some printers do not support date printing. See the printer manual for details.
- **4** Press the selector left or right to display a picture you wish to add to or remove from the print order.

- **5** Press the selector up or down to choose the number of copies (up to 99). To remove a picture from the print order, press the selector down until the number of copies is zero.
- **6** Repeat Steps 4–5 to complete the print order and press **MENU/OK** when settings are complete.
- **7** A confirmation dialog will be displayed. Press **MENU/OK** to save the print order.
  - Print orders can contain a maximum of 999 pictures.
  - If a memory card is inserted containing a print order created by another camera, a message will be displayed. Create a new print order as described above.

## Viewing Pictures on a Computer

The supplied software can be used to copy pictures to a computer, where they can be stored, viewed, organized, and printed. Before proceeding, install the software as described below. **Do NOT** connect the camera to the computer until installation is complete.

#### Windows: Installing MyFinePix Studio

**1** Confirm that the computer meets the following system requirements:

	Windows 7*	Windows Vista*	Windows XP*
CPU	3 GHz Pentiu	m 4 or better	2 GHz Pentium 4 or better
RAM	1 GB o	r more	512 MB or more
Free disk space	lisk space 15 GB or more 2 GB or more		2 GB or more
	<ul> <li>1024 × 768 pixels or more with 24-bit color or better</li> <li>A graphics processing unit (GPU) that supports DirectX 7 or later</li> </ul>		
Other	USB ports. • Internet connectior .NET Framework (if r	n (broadband recom	n is not guaranteed with other mended) required to install update feature, and when per- ne or via e-mail.

\* Other versions of Windows are not supported. Only pre-installed operating systems are supported; operation is not guaranteed on home-built computers or computers that have been upgraded from earlier versions of Windows.

**2** Start the computer. Log in to an account with administrator privileges before proceeding.

**3** Exit any applications that may be running and insert the installer CD in a CD-ROM drive.

#### Windows 7/Windows Vista

If an AutoPlay dialog is displayed, click **SETUP.EXE**. A "User Account Control" dialog will then be displayed; click **Yes** (Windows 7) or **Allow** (Windows Vista).

The installer will start automatically; click **Install MyFinePix Studio** and follow the on-screen instructions to install MyFinePix Studio.

#### If the Installer Does Not Start Automatically

If the installer does not start automatically, select **Computer** or **My Computer** from the Start menu, then double-click the **FINEPIX** CD icon to open the FINEPIX CD window and double-click **setup** or **SETUP.EXE**.

- **4** If prompted to install Windows Media Player, DirectX, or .NET Framework, follow the on-screen instructions to complete installation.
- **5** Remove the installer CD from the CD-ROM drive when installation is complete. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software.

Installation is now complete. Proceed to "Connecting the Camera" (🕮 52).

### Macintosh: Installing FinePixViewer

1 Confirm that the computer meets the following system requirements:

CPU	PowerPC or Intel	
05	Pre-installed copies of Mac OS X version 10.3.9–10.6	
RAM	256 MB or more	
Free disk space A minimum of 200 MB required for installation with 400 MB available FinePixViewer is running		
Video	$800 \times 600$ pixels or more with thousands of colors or better	
Other	Built-in USB port recommended. Operation is not guaranteed with other USB ports.	

- **2** After starting the computer and quitting any applications that may be running, insert the installer CD in a CD-ROM drive and double-click **Installer for Mac OS X**.
- **3** An installer dialog will be displayed; click **Installing FinePixViewer** to start installation. Enter an administrator name and password when prompted and click **OK**, then follow the on-screen instructions to install FinePixViewer. Click **Exit** to quit the installer when installation is complete.

 
- **4** Remove the installer CD from the CD-ROM drive. Note that you may be unable to remove the CD if Safari is running; if necessary, quit Safari before removing the CD. Store the installer CD in a dry location out of direct sunlight in case you need to re-install the software.
- 5 Mac OS X 10.5 or earlier: Open the "Applications" folder, start Image Capture, and select Preferences... from the Image Capture application menu. The Image Capture preferences dialog will be displayed; choose Other... in the When a camera is connected, open menu, then select FPVBridge in the "Applications/FinePixViewer" folder and click Open. Quit Image Capture.

Mac OS X 10.6: Connect the camera and turn it on. Open the "Applications" folder and start Image Capture. The camera will be listed under DEVICES; select the camera and choose FPVBridge from the Connecting this camera opens menu and click Choose. Quit Image Capture.

Installation is now complete. Proceed to "Connecting the Camera" (🕮 52).

### Connecting the Camera

- **1** If the pictures you wish to copy are stored on a memory card, insert the card into the camera.
  - Windows users may require the Windows CD when starting the software for the first time.
  - ① Loss of power during transfer could result in loss of data or damage to the memory card. Insert fresh or fully-charged batteries before connecting the camera.
- **2** Turn the camera off and connect the supplied USB cable as shown, making sure the connectors are fully inserted. Connect the camera directly to the computer; do not use a USB hub or keyboard.



- 3 Press the ▶ button for about a second to turn the camera on. MyFinePix Studio or FinePixViewer will start automatically; follow the on-screen instructions to copy pictures to the computer. To exit without copying pictures, click **Cancel**.
  - If the software does not start automatically, it may not be correctly installed. Disconnect the camera and reinstall the software.

For more information on using the supplied software, start the application and select the appropriate option from the **Help** menu.

- ① If a memory card containing a large number of images is inserted, there may be a delay before the software starts and you may be unable to import or save images. Use a memory card reader to transfer pictures.
- ① Make sure that the computer does not display a message stating that copying is in progress before turning the camera off or disconnecting the USB cable. Failure to observe this precaution could result in loss of data or damage to the memory card.
- ${\scriptstyle \textcircled{O}}$  Disconnect the camera before inserting or removing memory cards.
- ${\rm I}$  In some cases, it may not be possible to access pictures saved to a network server using the supplied software in the same way as on a standalone computer.
- ① The user bears all applicable fees charged by the phone company or Internet service provider when using services that require an Internet connection.


#### Uninstalling the Supplied Software

 Only uninstall the supplied software when it is no longer required or before beginning reinstallation. After quitting the software and disconnecting the camera, drag the "FinePixViewer" folder from "Applications" into the Trash and select **Empty Trash** in the **Finder** menu (Macintosh), or open the control panel and use "Programs and Features" (Windows 7/Windows Vista) or "Add or Remove Programs" (Windows XP) to uninstall MyFinePix Studio. Under Windows, one or more confirmation dialogs may be displayed; read the contents carefully before clicking **OK**.

## Using the Menus: Shooting Mode

## **Using the Shooting Menu**


To display the shooting menu, press **MENU/OK** in shooting mode. Highlight items and press the selector right to view options, then highlight an option and press **MENU/OK**. Press **DISP/BACK** to exit when settings are complete. The options available vary with the shooting mode selected.



### Shooting Menu Options

SHOOTING MODE		(defaults to 册)
Choose a shooting mode according to the type of subject (💷 18).		
ISO ISO		(defaults to AUTO)
Control the camera's sensitivity to light. Higher values can reduce blur; note, however, that mot- tling may appear in pictures taken at high sensitivities.		
100		1600
Bright	← Scene →	Dark
Less noticeable	← Noise (mottling)→	More noticeable
Option Description		
AUTO	Sensitivity is adjusted automatically in response	e to shooting condi-

AUTO	tions.
1600/800/400/200/100	Sensitivity is set to the specified value, which is shown in the display.

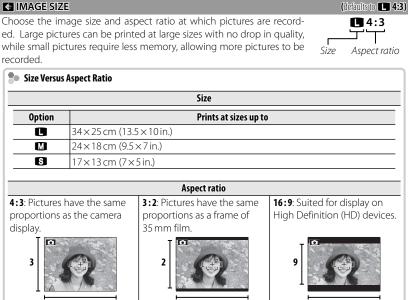

Menus

16

#### (defaults to **4:3**)

#### IMAGE QUALITY

(defaults to N)

Choose how much image files are compressed.

Option	Description	
FINE Low compression. Select for higher image quality.		
NORMAL High compression. Select this option to store more pictures.		

#### B WHITE BALANCE

For natural colors, choose a setting that matches the light source.

Option	Description	
AUTO	White balance adjusted automatically.	
*	✤ For subjects in direct sunlight.	
	For subjects in the shade.	
Ħ	₩ Use under "daylight" fluorescent lights.	
光 Use under "warm white" fluorescent lights.		
岸	Use under "cool white" fluorescent lights.	
-Å-	Use under incandescent lighting.	

Results vary with shooting conditions. Play pictures back after shooting to check colors in the LCD monitor.

#### Using the Menus: Shooting Mode

#### **FACE DETECTION**

Choose whether the camera automatically detects and sets focus and exposure for human portrait subjects (🕮 31).

#### MODE

Choose how panoramas are framed (🕮 21).

### **QUALITY**

Menus

 
Choose a frame size for movies (🕮 41).

(defaults to 📖)

(defaults to 640)

## Using the Playback Menu

To display the playback menu, press **MENU/OK** in playback mode. Highlight items and press the selector right to view options, then highlight an option and press **MENU/OK**. Press **DISP/BACK** to exit when settings are complete.



## Playback Menu Options

PHOTOBOOK ASSIST

Create books from your favorite photos (🕮 37).

#### MAGE SEARCH

Search for pictures (🕮 36).

### ERASE

Delete all or selected pictures (🕮 35).

#### MARK FOR UPLOAD TO

Select pictures for upload to YouTube or Facebook using MyFinePix Studio (Windows only).

#### Selecting Pictures for Upload

 
- 1 Select YouTube to choose movies for upload to YouTube, FACEBOOK to choose photos and movies for upload to Facebook.
- 2 Press the selector left or right to display pictures and press **MENU/OK** to select or deselect. Press **DISP/BACK** to exit when all the desired pictures are selected.
- Only movies can be selected for upload to YouTube.
- > During playback, selected pictures are indicated by SouTube or S FACEBOOK icons.

#### RESET ALL: Deselecting All Pictures

Choose **RESET ALL** to deselect all pictures. If the number of pictures affected is very large, a message will be displayed while the operation is in progress. Press **DISP/BACK** to exit before the operation is complete.

#### Uploading Pictures (Windows Only)

Selected pictures can be uploaded using the **YouTube/Facebook Upload** option in MyFinePix Studio.



Upload from computer

For information on installing MyFinePix Studio and connecting the camera to a computer, see "Viewing Pictures on a Computer" (🗐 48).

#### **SLIDE SHOW**

(defaults to MULTIPLE)

View pictures in an automated slide show. Choose the type of show and press **MENU/OK** to start. Press **DISP/BACK** at any time during the show to view on-screen help. The show can be ended at any time by pressing **MENU/OK**.

Option	Description	
NORMAL	Press selector left or right to go back or skip ahead one frame. Select FADE-IN	
FADE-IN	for fade transitions between frames.	
NORMAL 😫	As above, except that camera automatically zooms in on faces selected with	
FADE-IN 😫	Intelligent Face detection.	
MULTIPLE	Display several pictures at once.	

The camera will not turn off automatically while a slide show is in progress.

### ■ PROTECT

Protect pictures from accidental deletion.

1 Select 🖸 PROTECT in the playback menu.

2 Highlight one of the following options and press MENU/OK:

- FRAME: Protect selected pictures. Press the selector left or right to view pictures and press MENU/OK to select or deselect. Press DISP/BACK when the operation is complete.
- SET ALL: Protect all pictures.
- RESET ALL: Remove protection from all pictures.
- $\oplus$  Protected pictures will be deleted when the memory card is formatted ( $\boxplus$  67).

#### CROP

Create a cropped copy of the current picture.

1 Display the desired picture.

- **2** Select **CROP** in the playback menu.
- 3 Use the zoom buttons to zoom in and out and use the selector to scroll the picture until the desired portion is displayed.
- 4 Press MENU/OK to display a confirmation dialog.
- **5** Press **MENU/OK** again to save the cropped copy to a separate file.
- Larger crops produce larger copies; all copies have an aspect ratio of 4:3. If the size of the final copy will be Ø, OK will be displayed in yellow.

Using the Menus: Playback Mode

#### 🔚 RESIZE

Create a small copy of the current picture.

- **1** Display the desired picture.
- 2 Select 🔚 RESIZE in the playback menu.
- 3 Highlight a size and press MENU/OK to display a confirmation dialog.
- 4 Press MENU/OK to save the resized copy to a separate file.
- The sizes available vary with the size of the original image.

#### IMAGE ROTATE

Rotate pictures taken in tall orientation so that they are displayed in tall orientation in the LCD monitor.

- 1 Display the desired picture.
- 2 Select **2** IMAGE ROTATE in the playback menu.
- **3** Press the selector down to rotate the picture 90° clockwise, up to rotate it 90° counterclockwise.
- **4** Press **MENU/OK**. The picture automatically be displayed in the selected orientation whenever it is played back on the camera.
- Protected pictures can not be rotated. Remove protection before rotating pictures (B 63).
- The camera may not be able to rotate pictures created with other devices.

#### PRINT ORDER (DPOF)

Select pictures for printing on DPOF- and PictBridge-compatible devices (🕮 46).

## <u>Using the Setup Menu</u>

- **1** Display the setup menu.
  - **1.1** Press **MENU/OK** to display the menu for the current mode.
  - **1.2** Press the selector left to highlight the tab for the current menu.
  - **1.3** Press the selector down to highlight  $\frac{2}{8\pi}$ .



tab

**1.4** Press the selector right to place the cursor in the setup menu.

## 2 Adjust settings.

Highlight items and press the selector right to view options, then highlight an option and press **MENU/OK**. Press **DISP/BACK** to exit when settings are complete.

## Setup Menu Options

#### DATE/TIME

Set the camera clock (💷 13).

#### TIME DIFFERENCE

Switch the camera clock instantly from your home time zone to the local time at your destination when traveling. To specify the difference between local time and your home time zone:

- **1** Highlight **+ LOCAL** and press the selector right.
- **2** Use the selector to choose the time difference between local time and your home time zone in increments of 15 minutes.

#### 3 Press MENU/OK.

To switch between local time and your home time zone, highlight **+ LOCAL** or **• HOME** and press **MENU/OK**.

Option	Description	
合 HOME	Switch to the time currently selected for 🕑 DATE/TIME (see above).	
	Switch to local time. If this option is selected, 🕂 and the time and date will be displayed in yellow for three seconds each time the camera is turned on.	

#### 💿 言語/LANG.

Choose a language (💷 95).

#### SILENT MODE

Select **ON** to disable the speaker and flash in situations in which camera sounds or lights may be unwelcome (note that the flash will still fire in **•4** mode).

(defaults to  $\mathbf{\Phi}$ )

(defaults to ENGLISH)

(defaults to OFF)

### C. RESET

Reset all settings except (C) DATE/TIME, C) TIME DIFFERENCE, C) BACKGROUND COLOR, C) VIDEO SYSTEM, and C) BATTERY TYPE to default values.

1 Highlight GRESET and press the selector right to display a confirmation dialog.

2 Highlight OK and press MENU/OK.

#### FORMAT

This option will format the memory card. When a memory card is inserted in the camera, select **OK** to begin formatting.

- ① All data—including protected pictures—will be deleted from the memory card. Be sure important files have been copied to a computer or other storage device.
- ① Do not open the battery-chamber cover during formatting.

#### IMAGE DISP.

(defaults to 1.5 SEC)

Choose how long pictures are displayed in the LCD monitor after shooting.

Option	Description	
3 SEC	Pictures are displayed for three seconds ( <b>3 SEC</b> ) or 1.5 seconds ( <b>1.5 SEC</b> ).	
1.5 SEC	Colors may differ slightly from those in the final image.	
ZOOM (CONTINUOUS)	Pictures are displayed until the <b>MENU/OK</b> button is pressed.	
OFF	Pictures are not displayed after shooting.	

The Setup Menu

Image: FRAME NO.       (defaults to CONT.)         New pictures are stored in image files named using a four-digit file number assigned by adding one to the last file number used. The file file file file file file file fil			
number is displayed during playback as shown at right. I FRAME NO.			File number
Option	Description		
	Numbering continues from the last file number used number, whichever is higher. Choose this option to		

 pictures with duplicate file names.

 RENEW
 Numbering is reset to 0001 after formatting or when a new memory card is inserted.

- If the frame number reaches 999-9999, the shutter release will be disabled (I 85).
- Selecting RESET (B) 67) sets FRAME NO. to CONTINUOUS but does not reset the file number.
- Frame numbers for pictures taken with other cameras may differ.

#### OPERATION SOUND

Choose OFF (mute) to disable control sounds.

(defaults to ho 1)

### SHUTTER SOUND

Choose the sound made by the shutter.

#### LCD BRIGHTNESS

Control the brightness of the display.

When a shooting mode option other than P (PROGRAM AE) is selected, display brightness is automatically adjusted during shooting regardless of a option selected for M LCD BRIGHT-NESS in response to ambient lighting conditions.

#### LCD MODE

Choose whether the display automatically dims to save power.

#### AUTO POWER OFF

Choose the length of time before the camera turns off automatically when no operations are performed. Shorter times increase battery life; if **OFF** is selected, the camera must be turned off manually. Note that in some situations the camera turns off automatically even when **OFF** is selected.

#### DIGITAL IS

When **AUTO** is selected, image stabilization is performed to reduce blur when the subject is poorly lit.

(defaults to OFF)

The Setup Menu (defaults to 🔊 1)

(defaults to 0)

 
(defaults to MON)

(defaults to 2 MIN)

#### BLINK DETECTION

(defaults to ON)

Choose **ON** to activate blink detection. If an option other than **OFF** is selected for **IMAGE DISP**. ( $\blacksquare$  67), a warning will be displayed if the camera detects subjects who may have blinked when the picture was taken. If **ZOOM (CONTINUOUS)** is selected, you can press the **V** button to zoom in on these subjects.




Blink detection is not performed if the camera fails to detect a face or when OFF is selected for IMAGE DISP.

### **Q** DIGITAL ZOOM

#### (defaults to OFF)

If **ON** is selected, pressing **T** button at the maximum optical zoom position will trigger digital zoom, further magnifying the image.

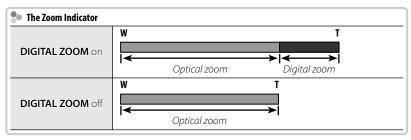

 $\ensuremath{\textcircled{}}$  Digital zoom produces lower quality images than optical zoom.

#### MOVIE ZOOM TYPE

(defaults to Di)

Choose the zoom type when recording movies.

- Digital zoom produces lower quality images than optical zoom.
- Optical zoom blocks sound being recorded when zooming.

#### BACKGROUND COLOR

Choose a color scheme.

#### **GUIDANCE DISPLAY**

Choose whether to display tool tips.

#### **WIDEO SYSTEM**

Choose a video mode for connection to a TV.

Option	Description	
NTSC	Select this mode for connection to video devices in North America, the Caribbean, parts of Latin America, and some East Asian countries.	
PAL	Select this mode for connection to video devices in the United Kingdom and much of Europe, Australia, New Zealand, and parts of Asia and Africa.	

#### BATTERY TYPE

(defaults to **LA** 

After replacing the batteries with batteries of a different type, select the battery type, and ensure that the battery level is displayed correctly and the camera does not turn off unexpectedly.

Option	Description
ALKALINE	AA alkaline (LR6) batteries
d⊡ NI-MH	AA rechargeable nickel-metal hydride (Ni-MH) batteries

(defaults to ON)

(defaults to NTSC)

#### DISCHARGE (Ni-MH Batteries Only)


The capacity of rechargeable Ni-MH batteries may be temporarily reduced when new, after long periods of disuse, or if they are repeatedly recharged before being fully discharged. Capacity can be increased by repeatedly discharging the batteries using **DISCHARGE** and recharging them in a battery charger (sold separately).

① Do not use **DISCHARGE** with non-rechargeable batteries.

# **Technical Notes**

## **Optional Accessories**

The camera supports a wide range of accessories from FUJIFILM and other manufacturers.

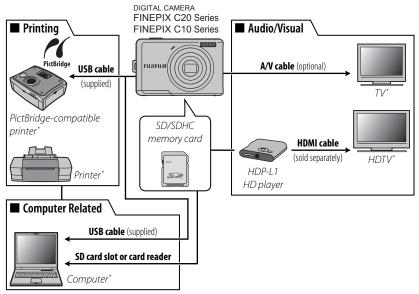

\* Available separately.

## Accessories from FUJIFILM

The following optional accessories are available from FUJIFILM. For the latest information on the accessories available in your region, check with your local FUJIFILM representative.

A/V cable	<b>AV-C1</b> : Use for viewing pictures on TV.	
HD players	<b>HDP-L1</b> (requires HDMI cable, available from third-party suppliers): Connect to a <b>H</b> igh <b>D</b> efinition (HD) TV to view photographs and movies from SD/SDHC memory cards.	

## Caring for the Camera

To ensure continued enjoyment of the product, observe the following precautions.

## Storage and Use

If the camera will not be used for an extended period, remove the batteries and memory card. Do not store or use the camera in locations that are:

- exposed to rain, steam, or smoke
- very humid or extremely dusty
- exposed to direct sunlight or very high temperatures, such as in a closed vehicle on a sunny day
- extremely cold
- subject to strong vibration
- exposed to strong magnetic fields, such as near a broadcasting antenna, power line, radar emitter, motor, transformer, or magnet
- in contact with volatile chemicals such as pesticides
- next to rubber or vinyl products

## Water and Sand

Exposure to water and sand can also damage the camera and its internal circuitry and mechanisms. When using the camera at the beach or seaside, avoid exposing the camera to water or sand. Do not place the camera on a wet surface.

## Condensation

Sudden increases in temperature, such as occur when entering a heated building on a cold day, can cause condensation inside the camera. If this occurs, turn the camera off and wait an hour before turning it on again. If condensation forms on the memory card, remove the card and wait for the condensation to dissipate.

## <u>Cleaning</u>

Use a blower to remove dust from the lens and LCD monitor, then gently wipe with a soft, dry cloth. Any remaining stains can be removed by wiping gently with a piece of FUJIFILM lens-cleaning paper to which a small amount of lenscleaning fluid has been applied. Care should be taken to avoid scratching the lens or LCD monitor. The camera body can be cleaned with a soft, dry cloth. Do not use alcohol, thinner, or other volatile chemicals.

## <u>Traveling</u>

Keep the camera in your carry-on baggage. Checked baggage may suffer violent shocks that could damage the camera.

## Troubleshooting

## **Problems and Solutions**

### **Power and Batteries**

Problem	Solution	
	• The batteries are exhausted: Insert fresh or fully-charged spare batteries ( 🗐 6).	
The camera does not	• The batteries are not in the correct orientation: Re-insert the batteries in the correct ori-	
turn on.	entation (💷 6).	
	• The battery-chamber cover is not latched: Latch the battery-chamber cover (🗐 6).	
	• The batteries are cold: Warm the batteries by placing them in a pocket or other warm place	
	and re-insert them in the camera immediately before taking a picture.	
	• There is dirt on the battery terminals: Clean the terminals with a soft, dry cloth.	
	• 🔊 is selected for shooting mode: Select 🗅 mode to reduce the drain on the battery	
	(🕮 18).	
The batteries run down	• The batteries are new, have been left unused for an extended period, or have been	
quickly.	recharged without first being fully discharged (rechargeable Ni-MH batteries only):	
	Discharge Ni-MH batteries using the 🚍 DISCHARGE option and recharge them in a battery	
	charger (sold separately). If the batteries do not hold a charge after repeated discharging and	
	recharging, they have reached the end of their service life and must be replaced.	
	• The batteries have been charged many times: The batteries have reached the end of its	
	charging life. Purchase new batteries.	
The camera turns off suddenly.	Insert fresh or fully-charged spare batteries (🗐 6).	

### **Menus and Displays**

Problem	Solution
Menus and displays are not in English.	Select ENGLISH for 🔯 言語/LANG. (🗐 13, 66).

### Shooting

Problem	Solution	
No picture is taken when	<ul> <li>Memory is full: Insert a new memory card or delete pictures (I 7, 35).</li> </ul>	
	<ul> <li>Memory is not formatted: Format the memory card (III) 67).</li> </ul>	
the shutter button is	• There is dirt on the memory card contacts: Clean the contacts with a soft, dry cloth.	
pressed.	• The memory card is damaged: Insert a new memory card (💷 7).	
	• The batteries are exhausted: Insert fresh or fully-charged spare batteries (🗐 6).	
	• The camera has turned off automatically: Turn the camera on (💷 11).	
The LCD monitor goes	The LCD monitor may darken while the flash charges. Wait for the flash to charge (💷 28).	
dark after shooting.	The LCD monitor may darken while the hash charges. Wait for the hash to charge ( == 20).	
The camera does not	<ul> <li>The subject is close to the camera: Select macro mode (</li></ul>	
focus.	• The subject is far away from the camera: Cancel macro mode (💷 27).	
	<ul> <li>The subject is not suited to autofocus: Use focus lock (         24).     </li> </ul>	
Macro mode is not	(bases a different chapting mode ( == 10)	
available	Choose a different shooting mode (💷 18).	
Intelligent Face Detection	Intelligent Face Detection is not available in the current shooting mode: Choose a differ-	
is not available.	ent shooting mode (💷 18).	

Problem	Solution	
No face is detected.	<ul> <li>The subject's face is obscured by sunglasses, a hat, long hair, or other objects: Remove the obstructions.</li> <li>The subject's face occupies only a small area of the frame: Change the composition so that the subject's face occupies a larger area of the frame (E 24).</li> </ul>	
	<ul> <li>The subject's head is tilted or horizontal: Ask the subject to hold their head straight.</li> <li>The camera is tilted: Keep the camera level (= 15).</li> <li>The subject's face is poorly lit: Shoot in bright light.</li> </ul>	
Wrong subject is	The selected subject is closer to the center of the frame than the main subject. Recompose the	
selected.	picture or turn face detection off and frame the picture using focus lock (💷 24).	
The flash does not fire.	<ul> <li>The flash is not available in the current shooting mode: Choose a different shooting mode ( 18).</li> <li>The batteries are exhausted: Insert fresh or fully-charged spare batteries ( 6).</li> <li>The camera is in silent mode: Turn silent mode off ( 66).</li> <li>The flash is off ( ): Choose a different flash mode ( 28).</li> </ul>	
Some flash modes are not available.	<ul> <li>The desired flash mode is not available in the current shooting mode: Choose a different shooting mode (== 18).</li> <li>The camera is in silent mode: Turn silent mode off (== 66).</li> </ul>	
The flash does not fully light the subject.	<ul> <li>The subject is not in range of the flash: Position the subject in range of the flash (= 94).</li> <li>The flash window is obstructed: Hold the camera correctly (= 15).</li> </ul>	
Pictures are blurred.	<ul> <li>The lens is dirty: Clean the lens (== 77).</li> <li>The lens is blocked: Keep objects away from the lens (== 15).</li> <li><b>!AF</b> is displayed during shooting and the focus frame is displayed in red: Check focus before shooting (== 83).</li> <li><b>!G</b> is displayed during shooting: Use the flash or a tripod (== 29).</li> </ul>	

Problem	Solution
Pictures are mottled.	This is normal when slow shutter speeds are selected at high temperatures and does not indicate a malfunction.
Vertical lines appear in pictures.	The camera has been used continuously at high temperatures. Turn the camera off and wait for it to cool down.
"Smear" in the form of vertical purple or white lines appears in the display.	Vertical purple or white lines may appear after the camera has been used continuously at high temperatures or when a very bright object is in the frame; this phenomenon is common to all CCD image sensors and does not indicate a malfunction. These lines are recorded in movies but do not appear in photographs. Avoid framing bright objects when filming movies.

## Playback

Problem	Solution	
Pictures are grainy.	The pictures were taken with a different make or model of camera.	
Playback zoom is unavail- able.	The pictures were created using 🔚 RESIZE or with a different make or model of camera.	
No sound in movie play- back.	Sound will not be played when you play a movie with this camera.	
Selected pictures are not	Some of the pictures selected for deletion are protected. Remove protection using the device with	
deleted.	which it was originally applied (🕮 63).	
File numbering is unexpectedly reset.         The battery-chamber cover was opened while the camera was on. Turn the camera opening the battery-chamber cover (E= 11).		

Problem	Solution			
	• The camera is not properly connected: Connect the camera properly (🗐 43).			
	<ul> <li>An A/V cable was connected during movie playback: Connect the camera once movie play- back basended.</li> </ul>			
No picture or sound.	Input on the television is set to "TV": Set input to "VIDEO".			
	• The camera is not set to the correct video standard: Match the camera I VIDEO SYS- TEM setting to the TV (I 72).			
	The volume on the TV is too low: Adjust the volume.			
No color	Match the camera 🚟 VIDEO SYSTEM setting to the TV (💷 72).			
The computer does not recognize the camera.	Be sure the camera and computer are correctly connected (🗐 52).			
Pictures can not be printed.	The camera is not properly connected: Connect the camera correctly ( 44).     The printer is off: Turn the printer on.			
Only one copy is printed/ the date is not printed.	The printer is not PictBridge compatible.			
The camera is unre-	• <b>Temporary camera malfunction</b> : Remove and reinsert the batteries (💷 6).			
sponsive.	• The batteries are exhausted: Insert fresh or fully-charged spare batteries (🗐 6).			
The camera does not function as expected.	Remove and reinsert the batteries ( $\blacksquare$ 6). If the problem persists, contact your FUJIFILM dealer.			
No sound.	Turn silent mode off (🗐 66).			

#### Connections/Miscellaneous

## Warning Messages and Displays

The following warnings are displayed in the LCD monitor:

Warning	Description	
<b>□</b> (red)	Batteries are low. Insert fresh or fully-charged spare batteries (🗐 6).	
💶 (blinks red)	Batteries are exhausted. Insert fresh or fully-charged spare batteries (💷 6).	
ļo	Slow shutter speed. Pictures may be blurred; use the flash or a tripod.	
<b>PAF</b> (displayed in red with red focus frame)	<ul> <li>The camera can not focus. Try one of the following solutions:</li> <li>Use focus lock to focus on another subject at the same distance, then recompose the picture (1) 24).</li> <li>Use macro mode to focus when taking close-ups (1) 27).</li> </ul>	
Aperture or shutter speed displayed in red	The subject is too bright or too dark and the picture will be over- or under-exposed. If the subject is dark, use the flash (💷 28).	
FOCUS ERROR TURN OFF THE CAMERA AND TURN ON AGAIN	Camera malfunction or moving parts of lens obstructed. Turn the camera off and then on again, taking care not to touch the lens. If the message persists, contact a FUJIFILM dealer.	
CARD NOT INITIALIZED	<ul> <li>The memory card is not formatted or was formatted in a computer or other device: Format the memory card using the FORMAT option in the camera setup menu (== 67).</li> <li>The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If the message is repeated, format the card (== 67). If the message persists, replace the card.</li> <li>Camera malfunction: Contact a FUJIFILM dealer.</li> </ul>	
PROTECTED CARD	The memory card is locked. Unlock the card (🕮 7).	
BUSY	The memory card is incorrectly formatted. Use the camera to format the card (💷 67).	

Warning	Description		
	The memory card is not formatted for use in the camera. Format the card (🗐 67).		
	The memory card contacts require cleaning or the memory card is damaged. Clean the contacts		
CARD ERROR	with a soft, dry cloth. If the message is repeated, format the card (🕮 67). If the message persists,		
CANDENNON	replace the card.		
	Incompatible memory card. Use a compatible card (💷 9).		
	Camera malfunction. Contact a FUJIFILM dealer.		
MEMORY FULL	The memory card is full and pictures can not be recorded or copied. Delete pictures or insert a		
	memory card with more free space.		
	• Memory card error or connection error: Reinsert the card or turn the camera off and then		
	on again. If the message persists, contact a FUJIFILM dealer.		
WRITE ERROR	Not enough memory remaining to record additional pictures: Delete pictures or insert		
	a memory card with more free space.		
	The memory card is not formatted: Format the memory card (🗐 67).		
	• The file is corrupt or was not created with the camera: The file can not be viewed.		
READ ERROR	• The memory card contacts require cleaning: Clean the contacts with a soft, dry cloth. If		
NLAD LINION	the message is repeated, format the card (🕮 67). If the message persists, replace the card.		
	Camera malfunction: Contact a FUJIFILM dealer.		

Warning	Description		
FRAME NO. FULL	The camera has run out of frame numbers (current frame number is 999-9999). Format the memory card and select <b>RENEW</b> for <b>PRAME NO</b> . Take a picture to reset frame numbering to 100-0001, then select <b>CONTINUOUS</b> for <b>FRAME NO</b> ( <b>E</b> 68).		
PRESS AND HOLD THE DISP BUTTON TO DEACTIVATE SILENT MODE	An attempt was made to choose a flash mode with the camera in silent mode. Exit silent mode before choosing a flash mode (🕮 66).		
TOO MANY FRAMES	A search has returned more 5,000 results, or more than 999 frames were selected for deletion Perform a different search or select fewer pictures.		
PROTECTED FRAME	An attempt was made to delete or rotate to a protected picture. Remove protection and try again ( $\blacksquare$ 63).		
640 CAN NOT CROP	🚳 pictures can not be cropped.		
CAN NOT CROP	The picture is damaged or was not created with the camera.		
640 CANNOT EXECUTE	An attempt was made to create a resized copy at a size equal to or larger than the original. Choose a smaller size.		
CAN NOT ROTATE	An attempt was made to rotate a picture that can not be rotated.		
😫 CAN NOT ROTATE	ROTATE Movies can not be rotated.		

Warning	Description		
NO CARD INSERT A NEW CARD	No memory card inserted; insert a memory card.		
DPOF FILE ERROR	The DPOF print order on the current memory card contains more than 999 images.		
CAN NOT SET DPOF	The picture can not be printed using DPOF.		
😫 CAN NOT SET DPOF	Movies can not be printed using DPOF.		
COMMUNICATION ERROR A connection error occurred while pictures were being printed or copied to a compute device. Confirm that the device is turned on and that the USB cable is connected.			
PRINTER ERROR Printer out of paper or ink, or other printer error. Check printer (see printer manual to resume printing, turn the printer off and then turn it back on.			
PRINTER ERROR Printer out of paper or ink, or other printer error. Check printer (see printer manual for de printing does not resume automatically, press <b>MENU/OK</b> to resume.			
CANNOT BE PRINTED	An attempt was made to print a movie, a picture not created with the camera, or a picture in a format not supported by the printer. Movies and some pictures created with other devices can not be printed; if the picture is a still picture created with the camera, check the printer manual to confirm that the printer supports the JFIF-JPEG or Exif-JPEG format. If it does not, the pictures can not be printed.		

# Appendix

## **Tips and Tricks**

The following tips and tricks will help you get the most from your camera.

## Battery Performance

Choose the following settings for improved battery performance:

- 🖾 FACE DETECTION (🕮 31): OFF
- 🕅 LCD MODE (🗐 69): 🖬 POWER SAVE ON

## 🍟 The Self-timer

- To prevent blur caused by the camera moving when the shutter button is pressed, use the two-second timer.
- To turn the timer off, press DISP/BACK.

### Tips and Tricks

🔞 Intelligent Face Detection				
When <b>ON</b> is selected for 🖾 FACE DETECTION (🕮 31), you can:				
Shooting • Zoom in on faces when ZOOM (CONTINUOUS) is selected for  Imes IM- AGE DISP. (				
Playback • Zoom in on faces during slide shows (🕮 62) or by pressing the selector down during playback.				
• Search for faces using 🐼 IMAGE SEARCH (🗐 36).				
• Crop the background from portraits using 🖾 CROP (🕮 63).				
<b>Printing</b> • <b>Print</b> one copy for each person in the photo.				

### 🍸 Pro Tips

- To photograph backlit subjects, select  **\$ NATURAL & \$** for **■ SHOOTING MODE** (■ 18) and position your subject in the center of the frame.
- To photograph night scenes, raise sensitivity (🗐 55) and turn the flash on (🗐 28).



## Memory Card Capacity

The following table shows the recording time or number of pictures available at different image sizes. All figures are approximate; file size varies with the scene recorded, producing wide variations in the number of files that can be stored. The number of exposures or length remaining may not diminish at an even rate.

### FinePix C20 Series

	Medium	20	5B	4(	5B	8	GB
		FINE	NORMAL	FINE	NORMAL	FINE	NORMAL
	4:3	310	620	630	1240	1270	2500
Phot	3:2	350	690	710	1390	1430	2790
Photographs	16:9	420	820	840	1640	1690	3290
aph	M 4:3	630	1210	1260	2420	2520	4850
, s	<b>S</b> 4:3	1150	2140	2300	4290	4600	8580
Movies*	640	24 min.		55 min.		111 min.	
ries*	320	58 min.		116 min.		233 min.	

\* Individual movies can not exceed 2 GB in size or 29 minutes in length. If more than 2 GB are available, the camera will show the time remaining for a movie 2 GB in size.

233 min.

#### FinePix C10 Series Medium 2 GB 4 GB 8 G B **(**# FINE NORMAL FINE NORMAL FINE NORMAL 4:3 370 730 750 1470 1510 2950 Photographs 3:2 420 820 840 1650 1690 3300 16:9 1930 500 960 1000 2000 3880 1470 2820 M 4:3 730 1410 2950 5640 **9** 4:3 1800 3230 3600 6460 7200 12930 Movies 640 24 min. 55 min. 111 min.

58 min.

\* Individual movies can not exceed 2 GB in size or 29 minutes in length. If more than 2 GB are available, the camera will show the time remaining for a movie 2 GB in size.

116 min.

#### Appendix

320

## Specifications

System			
Model	Digital Camera FinePix C20 Series/C10 Series		
Effective pixels	FinePix C20 Series 12 million		
	FinePix C10 Series 10 million		
CCD	1/2.3-in., square-pixel CCD with primary color filter		
Storage media	SD/SDHC memory cards		
File system	Compliant with Design Rule for Camera File System (DCF), Exif 2.3, and Digital Print Order Format (DPOF)		
File format	Still pictures: Exif 2.3 JPEG (compressed)     Movies: AVI-format Motion JPEG		
Image size (pixels)	FinePix C20 Series         • ① 4:3: 4,000 × 3,000         • ② 4:3: 2,816 × 2,112         • ③ 4:3: 2,048 × 1,536		
	FinePix C10 Series         • ① 4:3: 3,664 × 2,748         • ② 4:3: 2,592 × 1,944         • ③ 4:3: 1,600 × 1,200		
Lens	Fujinon 3 × optical zoom lens, F3.9 (wide angle) – F5.9 (telephoto)		
Focal length	f=6.8 mm-20.4 mm (35-mm format equivalent: 38 mm-114 mm)		

System		
Digital zoom	FinePix C20 Series Approx. $6.3 \times$ (up to $18.9 \times$ when combined with optical zoom)	
	FinePix C10 Series           Approx. 5.7 $\times$ (up to 17.1 $\times$ when combined with optical zoom)	
Aperture	F3.9 (wide angle), F5.9 (telephoto)	
Focus range (distance from front of lens)	<ul> <li>Approx. 60 cm (2.0 ft.)-infinity (wide angle); 60 cm (2.0 ft.)-infinity (telephoto)</li> <li>Macro: approx. 10 cm-70 cm/0.3 ft2.3 ft. (wide angle); 60 cm-100 cm/2.0 ft3.3 ft. (telephoto)</li> </ul>	
Sensitivity	Standard output sensitivity equivalent to ISO 100, 200, 400, 800, 1600; AUTO	
Metering	256-segment through-the-lens (TTL) metering	
Exposure control	Programmed AE	
Exposure compensation	$-2 \text{ EV} - +2 \text{ EV}$ in increments of $\frac{1}{3} \text{ EV}$	

## Specifications

System		
Image stabilization	Digital image stabilization	
Shutter speed	• AUTO mode: ¼ s−½,000 s	
(combined mechanical and	• Other modes: 4s-1/2,000 s	
electronic shutter)		
Focus	Mode: Single AF, continuous AF	
	Autofocus system: Contrast-detect TTL AF	
	Focus-area selection: CENTER	
White balance	Automatic scene detection; six manual preset modes for direct sunlight, shade, daylight fluores-	
	cent, warm white fluorescent, cool white fluorescent, and incandescent	
Self-timer	Off, 10 sec., 2 sec.	
Flash	CCD-metered auto flash control; effective range when sensitivity is set to <b>AUTO</b> is approx. 60 cm $-3.1$ m/2.0 ft. $-10.2$ ft. (wide angle), 60 cm $-2.0$ m/2.0 ft. $-6.6$ ft. (telephoto); effective range in macro mode is approx. 30 cm $-80$ cm/0.9 ft. $-2.6$ ft. (wide angle), 60 cm $-1.0$ m/2.0 ft. $-3.3$ ft. (telephoto)	
Flash mode	Auto, fill flash, off, slow sync (red-eye removal off); auto with red-eye removal, fill flash with red-	
	eye removal, off, slow sync with red-eye removal (red-eye removal on)	

System			
LCD monitor	2.4-in., 110k-dot color LCD monitor; frame coverage approx. 96%		
Movies	Frame size 640 × 480, 320 × 240; 30 fps; monaural sound		
Languages	Arabic, Bulgarian, Simplified Chinese, Traditional Chinese, Czech, English, Farsi, French, German, Greek, Hebrew, Hungarian, Indonesian, Italian, Kazakh, Latvian, Lithuanian, Polish, Portuguese, Romanian, Russian, Serbian, Slovak, Spanish, Thai, Turkish, Ukrainian, Vietnamese		
Input/output terminals			
A/V OUT (audio/video output)	NTSC or PAL output with monaural sound		
Digital input/output	USB 2.0 High-Speed; shares A/V OUT connector;	MTP/PTP	
Power supply/other			
Power supply	<ul> <li>AA alkaline batteries (×2)</li> <li>AA rechargeable nickel-metal hydride (Ni-MH) batteries (×2; sold separately)</li> </ul>		
Battery life (approximate	Battery type	Approximate number of frames	
number of frames that can be taken with a fully-charged	AA alkaline batteries (when Panasonic batteries are used)	160	
battery)	AA Ni-MH batteries	350	
	CIPA standard, measured in 🗖 (auto) mode and SD memory card.		
	<b>Note</b> : Number of shots that can be taken with batteries varies with batteries charge level and will decline at low temperatures.		

## Specifications

Power supply/other	
Camera dimensions $(W \times H \times D)$	<b>91.3 mm × 59.0 mm × 32.1 mm/3.6 in. × 2.3 in. × 1.3 in.,</b> <b>excluding projections</b> (minimum depth 29.2 mm/1.1 in.)
Camera weight	Approx. 100 g/3.5 oz., excluding batteries, accessories, and memory card
Shooting weight	Approx. 150 g/5.3 oz., including batteries and memory card
Operating conditions	• Temperature: 0 °C - +40 °C/+32 °F - +104 °F
	Humidity: 10% – 80% (no condensation)

## Notices

- Specifications subject to change without notice. FUJIFILM shall not be held liable for damages resulting from errors in this manual.
- Although the LCD monitor is manufactured using advanced high-precision technology, small bright points and anomalous colors may appear, particularly in the vicinity of text. This is normal for this type of LCD monitor and does not indicate a malfunction; images recorded with the camera are unaffected.
- Digital cameras may malfunction when exposed to strong radio interference (e.g., electric fields, static electricity, or line noise).
- Due to the type of lens used, some distortion may occur at the periphery of images. This is normal.

## FUJIFILM

FUJIFILM Corporation 7-3, AKASAKA 9-CHOME, MINATO-KU, TOKYO 107-0052, JAPAN